


THE PLANS AND DRAWINGS CONTAINED HEREIN ARE PROPRIETARY AND MAY NOT BE COPIED OR REPRODUCED MECHANICALY, ELECTRONICALY OR BY ANY MEANS WITHOUT WRITTEN PERMISSION FROM AFC INDUSTRIES, INC.

1 INDUSTRIES, INC.

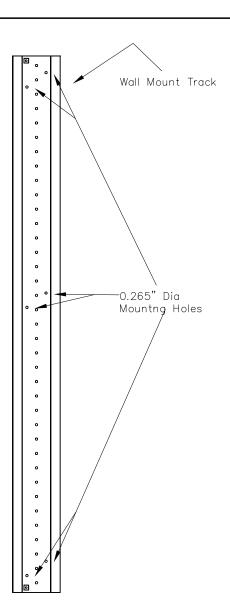

- A) Position the wall mount track at the desired height.
- B) Slide the monitors, keyboard/CPU Holders in order to locate the mounting holes by pulling the spring loaded knob.
- C) Depending on the wall structure use appropiate screws and screw them on through the mounting holes to the wall structure.
- D) Position your monitors keyboards and CPU at required height.

NOTES : ALL UNITS IN INCHES.	MATERIAL :	DRAWN BY: VGM DATE: 01/27/05	DESCRIPTION : Wall Mount
BREAK CORNERS AS SPECIFIED RADII		A P P R O V E D	
1	TOLERANCES UNLESS OTHERWISE SPECIFIED	ENG:	USED ON :
'	FRACTIONAL ±1/64 2 PLC. DEC. ±.01	MFG :	PATH:
1	3PLC. DEC. ±.001 ANGULAR ±.5°	QA:	F.Assmbly\Assembly Inst PDF NAME: Track Installation REV: SIZE
1	FINISH 32/	SCALE : N.T.S.	PDF NAME: Track Installation REV: SIZE A